

TIC Studio Wireless List

TVch	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	専用帯	B帯		
Fz	470~476	476~482	482~488	488~494	494~500	500~506	506~512	512~518	518~524	524~530	530~536	536~542	542~548	548~554	554~560	560~566	566~572	572~578	578~584	584~590	590~596	596~602	602~608	608~614	614~620	620~626	626~632	632~638	638~644	644~650	650~656	656~662	662~668	668~674	674~680	680~686	686~692	692~698	698~704	704~710	710~714	806~810		
analog	★	★	★		★		★	★									★		★		★	★	★	★	★	★	★	★	★	★												★	★	
digital		★			★		★	★									★		★		★		★		★	★		★		★													★	★

SHURE	RM	analog	G19(470~530/13ch~22ch)	H18(518~578/21ch~30ch)	J12(578~638/31ch~40ch)	L20(638~698/41ch~50ch)	M6(692~714/50ch~専)
		digital	G1HK(470~530/13ch~22ch)	J5HK(578~638/31ch~40ch)	L3HK(638~698/41ch~50ch)	K56(606~714/36ch~専)	
		EM analog	G56(470~626/13ch~38ch)	H50(572~636/30ch~40ch)	L53(632~714/40ch~専)	L11J(670~714/47ch~52+専)	
	EM	analog	G10J(470~542/13ch~24ch)	J8J(554~626/27ch~38ch)	L8J(626~698/39ch~50ch)		
		digital	G50(470~534/13ch~23ch)	J51(638~698/41ch~50ch)			
		analog					

SENNHEISER	RM	analog	LJ(470~638/13ch~40ch)	NJ(606~714/35ch途中~専用帯)	
		digital	A1~A4(407~558 13ch~27ch途中)	A5~A8(550~638 26ch途中~40ch)	
	EM	analog	AW(516~558/21ch~27ch途中)	GW(558~626/27ch~38ch)	BW(626~704/39ch~51ch)
		digital			B1~B4(630~714 39ch~専用帯)

Wisycom	RM	analog	Range1(470~640/13ch~41ch途中)	Range2(566~798/29ch~専)
	EM	analog	N(470~700/13ch~51ch途中)	M(556~798/29ch~専)

SONY	RM	digital	L(470~542/13ch~24ch)	M(566~638/29ch~40ch)	H(638~714/41ch~専)
------	----	---------	----------------------	----------------------	-------------------